


Sheet 1

Assembling the pipe work.

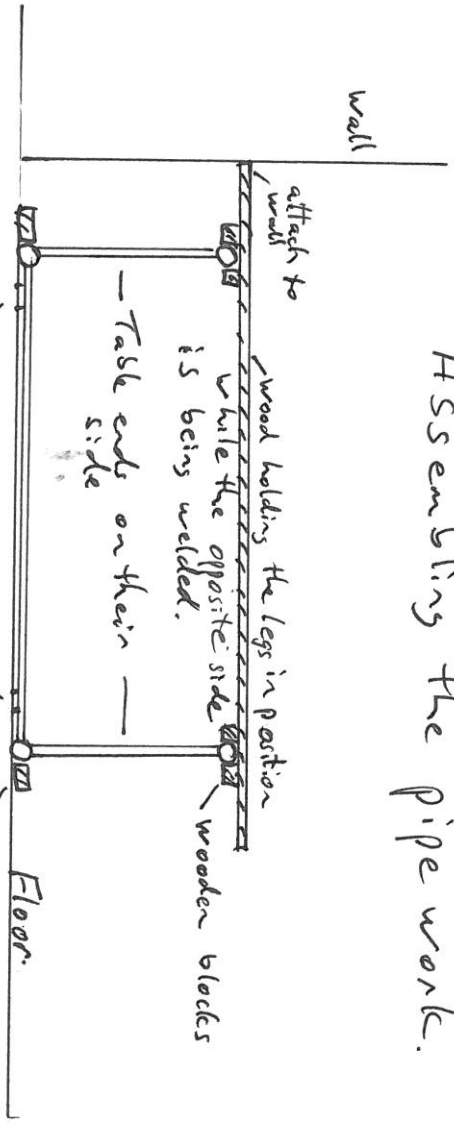

wall

attach to wall

wood holding the legs in position while the opposite side is being welded.

— Table ends on their side —

wooden blocks


Floor.

Spacers to lift the apron to the correct height off the floor while welding.

wood screwed to the floor to hold the pipe in position

Table ends laid down on the floor & positioned to ready to weld.

Spacers lift the apron to the correct height

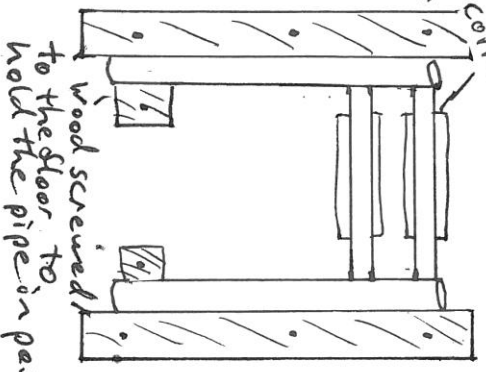

wood screwed to the floor to hold the pipe in position

Weld the two ends first then weld the sides.

Sheet 2.

